

## Replace Air Tank:

Tank replacement kit / Tank reparationssæt:



Tank replacement / Udskiftning af lufttank:



- 1) Remove the solenoid on the solenoid Valves by unscrew the nut at the solenoid (14mm wrench)  
1) Fjern spolen fra magnetventilen ved at løsne møtrikken der holder spolen (14mm skruenøgle)
  
- 2) Heat the rear side of the valve, a bit with at heat-gun  
2) Varm bagsiden af ventilen med en varmepistol, til plastdelen bliver lidt blankere i overfladen



- 3) Dismantle broken fitting from valve with a conical “hex tool” fit to the threaded piece. Gently mount the tool in the plastic piece with a hammer.
- 3) Fjern det knækkede gevind fra ventil med et konisk sekskantet værktøj, som kan bankes forsigtigt ned, indvendig i gevindstykket, som sidder fast i ventilen.



- 4) Gently screw the plastic piece counter clockwise, when it is still hot
- 4) Skru gevindstykket ud, mens det stadig er varmt



- 5) Clean the internal threads for old Loctite, make sure that nothing is stoked inside the valve
- 5) Rengør det indvendige gevind og fjern gammelt Loctite mv. vær opmærksom på at få allstumper ud af ventilen
- 6) Seal the thread with Loctite 577 or Teflon tape
- 6) Brug gevindtætner Loctite 577 eller gevindtape



- 7) Install the valves on the new tank. Solenoid facing in same direction as original
- 7) Installer ventilerne på tanken. Spolerne skal vende i same retning som original.



- 8) Install air tube in the push-in fitting
- 8) Pres luftslangen på plads i push-in fittings

